


# Sticking Grill Ignition (hot surface or spark)



If your Hot Surface or Spark ignition continues to Glow or spark with out de-pressing the knob.

Using needle nose pliers, place it under the valve stem bracket and gently bend up slightly. (DO NOT OVER BEND OR FORCE IT)

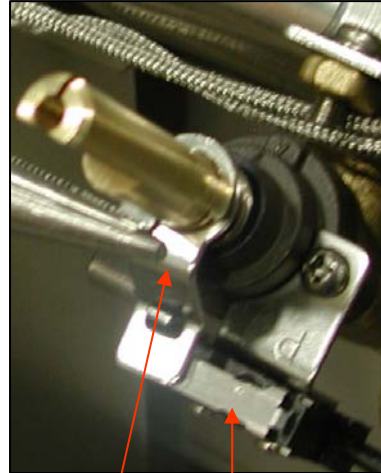

Bracket

Do Not Bend This Lever